

USER GUIDE

Developed and designed by hisense Ltd.



Congratulations for purchasing Breezy, a state-of-the-art solution for making any place from baby's room to the office a Breath-Easy environment. With Breezy you can be reassured about your baby's comfort when breathing; either in hot summer days or cold winter nights.

The present User Guide provides instructions for the installation, testing, operation, maintenance, and troubleshooting of the device.

Background

Creating and maintaining balanced humidity levels is essential for an effortless, relaxed breathing environment for your baby. Heating with air-conditioning during winter, causes a decrease in air humidity levels. This may cause breathing difficulties and might worsen soreness caused from cold, sinusitis, and stridor.


Breezy restores humidity back into the air. Creating a balanced, pleasant and Breath-easy environment. Breezy is Ideal for every room, weather at home or in the office.


Main Qualities


Breezy contains a small mechanism that breaks the water into very small particles. The small water particles are thrown into the air as cold mist. A mist-adjustment knob allows easy control of mist flow intensity; A built-in hygrometer for convenient tracking of humidity levels. A designated cavity at top of water tank, offers to add aromatherapy oils. A filter for minimizing the effects of scale (caused by minerals in the water). A built-in thermometer.

When the mist adjustment knob is turned on, the ionizing option is working: improving the environment in baby's room

Breezy Components:



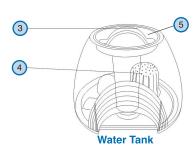








Water Tank Bottem View

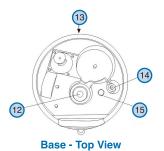

- 1 Thermometer
- 2 Mist Nozzle
- 3 Handle
- 4 Filter
- 5 Cavity (for adding aromatherapy oils)
- 6 Humidity Gauge (Hygometer)
- 7 Ionizer LED
- 8 Cord & Plug

- 9 Mist Adjustment Knob
- 10 Tank Cover
- 11 Water Inlet (Under Tanck Cover)
- 12 Transducer
- 13 On/Off Switch
- (14) Water Level Coil
- 15 Refill Indicator LED

Installation

- Place Breezy on a flat, steady surface. Make sure cable is not plugged into electricity.
- Remove cap.
- Lift water tank by handle.
- Turn-over water tank, and remove tank cover (turn counter clock wise).
- Fill water-tank with tap water (not hot); don't fill all the way so it doesn't spill.
- Return tank cover to its place and close firmly (turn clock wise).
- Turn water-tank over again (up-right position) and hold handle; place on top of base. Make sure that both parts are sitting properly on top of each other (not shaking/moving).
- Return cap to top of water-tank.

Operating

- Plug Breezy and turn power switch to ON. The refill indicator will light up blue. Mist should start appearing within a few seconds.
- Use the mist-adjustment knob (by turning), to adjust intensity of mist flow.
 MIN for light flow, MAX for strong flow.

NOTE:

 Upper part of water-tank contains a build in cavity - designated for aromatherapy oils. Lift cap, drip according to instructions of oil manufacturer, close cap.

In case of doubt and/or lack of instructions - do not use!

 Breezy is equipped with an automatic safety system; if water-tank empties, Breezy is stopped and refill indicator turns red.

Maintenance and cleaning

WARNING:

make sure to turn OFF and UNPLUG before any cleaning operation.

Follow these next steps to assure a long-lasting, satisfying use of Breezy:

- In places were hard-water is common (water that contain mineral salts), scale
 may accumulate inside the transducer. Clean the transducer once a week with
 a damp cloth (vinegar) or with enclosed brush.
 - Using filtered water can reduce the build-up of scale.
- Do not clean with chemical detergents.
- Clean water-tank once a week: fill tank with clean water and add-drops of liquid soap, close cork and shake well. Empty water-tank and rinse thoroughly, repeat rinse several times.
- In case of bad odors from Breezy:
 - Empty all water from water-tank. Clean inside of water-tank with cloth dampened in vinegar. Wash with clean water.
- Do not leave water in Breezy when not being used.
- Clean and dry all parts of Breezy, before storing.
- When filling/changing water in water-tank, it is recommended to clean the transducer from accumulation of scale. Clean with soft cloth or enclosed brush.
- Base must be kept dry at all times (on the outside).

Troubleshooting Chart		
Problem	possible Cause and corrective Action	
Breezy is not operating	Check if Breezy is plugged into electricity. Check if power switch is set to ON.	
Water leakage	Check that Breezy is standing on a flat, balanced surface.	
Blue LED is lit, but no mist	Check that water-tank is full with water. Check that transducer (page 3) and/or water-level-Coil, are mooving freely and not blocked with scale build-up or dust. Clean according to guide (see maintenance and cleaning).	
	Turn mist-adjustment knob to set intensity of mist flow.	
Red LED is lit	Check if there is water in water-tank. If not: turn Breezy OFF and fill water.	
	Operation of Breezy can be continued only after filling the water-tank and placing it back on base.	

WARNINGS:

- Do not operate with wet hands or/if barefoot.
- Do not fill water in base of Breezy, ONLY in water-tank.
- Do not fill water-tank with hot water.
- Fill water tank ONLY with clean water. Do not add soap, oils or any other substances.
- Disconnect from electricity when assembling, cleaning, filling or emptying.
- Disconnect from electricity when not in use.
- Make sure that tank cover is closed tightly, after water-tank is filled.
- Do not remove cap or water-tank when Breezy is ON.
- Do not use electrical cable if/when damaged, or if Breezy is damaged.
- Do not cover Breezy when ON.
- Make sure that mist nozzle is not aimed in direction of furniture/walls/electrical appliances.
- Do not place Breezy in direct sun light and/or surrounding of heat source (oven, fire place, etc'.).
- Do not leave Breezy exposed outside (rain/sun).
- Place on a flat, steady surface. At height of 0.5-1m from floor.
- In case of any malfunctions, please contact your closest distributor.
 (See list at www.hisense.co.il)
- Water-tank is fragile, use with caution.
- Keep away from children's reach.
- Manufacturer is not responsible for any damage caused by inappropriate use of Breezy.

CERTIFICATE OF WARRANTY

- 1. This Certificate is given as a full technical warranty to the proper function of our product: Breezy (hereby "Breezy" and/or "the Product").
- 2. Hisense Ltd. (hereby "Hisense") is responsible under this Certificate, to either repair or replace on its own expense and at its own discretion, Products that prove, to Hisense sole judgment, to be defective regardless the correct use of the Product according to its Manual of Instructions ("user manual/parents guide") by the end user.All services shall be handled by Hisense products local distributor, see section 5.
- 3. Hisense warrants it's Product, under this Certificate, for a period of 12 months from the date of purchase by the end user, whose name and address will be registered on this Certificate, and such Certificate will not be transferred without Hisense prior consent.
- 4. Not withstanding the above, this Warranty will not cover problems in Products that, in Hisense sole judgment, were caused by:
 - 4.1. Inadequate or improper use that is not in accordance with its Instructions;
 - 4.2. Modifications or servicing not authorized by Hisense;
 - 4.3. Accident or negligence;
 - 4.4. Internal or external break, carelessness, color changes, batteries, lamps or any usage that diverge from the Product's Instructions.
- 5. For any question or problems, find closest distributor through our website. Or contact us at: hisense@netvision.net.il
- Be sure to keep this certificate along with the purchase receipt for future connection.

This Certificate of Warranty shall be valid only when presented with the original purchase receipt.

Clients full Name:	
Adress:	
Phone:	_ Mobile Phone:
E-mail:	
Purchase date:	_



V.08.08